

AC24016 parts list									
No	Item code		Qty						
1	E100022001	Screw	12						
2	E100022002	Cushion	12						
3	E100022003	Cylinder Head	2						
4	E100022004	Seal	2						
5	E100022005	Screw	4						
6	E100022006	Limit Range Implement	4						
7	E100022007	Valve Block	6						
8	E100022008	Valve Board	2						
9	E100022009	O-Ring	2						
10	E100022010	Valve Block	4						
11	E100022011	Valve plate clamp	2						
12	E100022012	Screw	2						
13	E100022013	Cylinder	2						
14	E100022014	Screw	2						
15	E100022015	Valve Board	2						
16	E100022016	Piston Cup	2						
17	E100022017	Connecting Rod	2						
18	E100022018	Heightening the lining	2						
19	E100022019	Wind Scooper	2						
20	E100022020	Screw	4						
21	E100022021	A Fan	1						
22	E100022022	Crank	2						
23	E100022023	Bearing	2						
24	E100022024	Screw	4						
25	E100022025	circlip for shaft	2						
26	E100022026	Screw	1						
27	E100022027	Serrated Lock Washers Internal Teeth	1						
28	E100022028	Power Cord Buckle	2						
29	E100022029	Right Crankcase	1						
30	E100022030	Cushion	4						
31	E100022031	Bolt	4						
32	E100022032	Motor Stator	1						
33	E100022033	Motor Rator	1						
34	E100022034	Bearing	2						
35	E100022035	Left Crankcase	1						
36	E100022036	Nut	4						
37	E100022037	Shock Pad	4						
38	E100022038	Nut	4						
39	E100022039	B Fan	1						
40	E100022040	O-Ring	4						
41	E100022041	Gas-guide Tube	2						
42	E100022042	Hush Pipe	2						
43	E100022043	Air Filter	2						
44	E100022044	Plug	1						
45	E100022045	Capacity	1						
46	E100022046	Screw	2						
47	E100022047	Flat washer	2						
48	E100022048	Capacity Cover	1						
49	E100022049	Power Cord Buckle	1						
50	E100022050	Hand Sleeve	3						
51	E100022051	Handle	1						
52	E100022052	Nut	2						
53	E100022053	Flat washer	2						

















