

PJCD551(CE)


EXPLODED
VIEW AND SPARE
PARTS LIST

EINZELTEILDAR-
STELLUNG UND
ERSATZEILLISTE

SCHEMA ECLATE ET
LISTE DES PIÈCES
DE RECHANGE

ESPLOSO DEI
COMPONENTI DE
ELENCO DELLE
PARTI DI RICAMBIO

DESPIECE DE LA
MAQUINA Y LISTA
DE RECAMBIOS

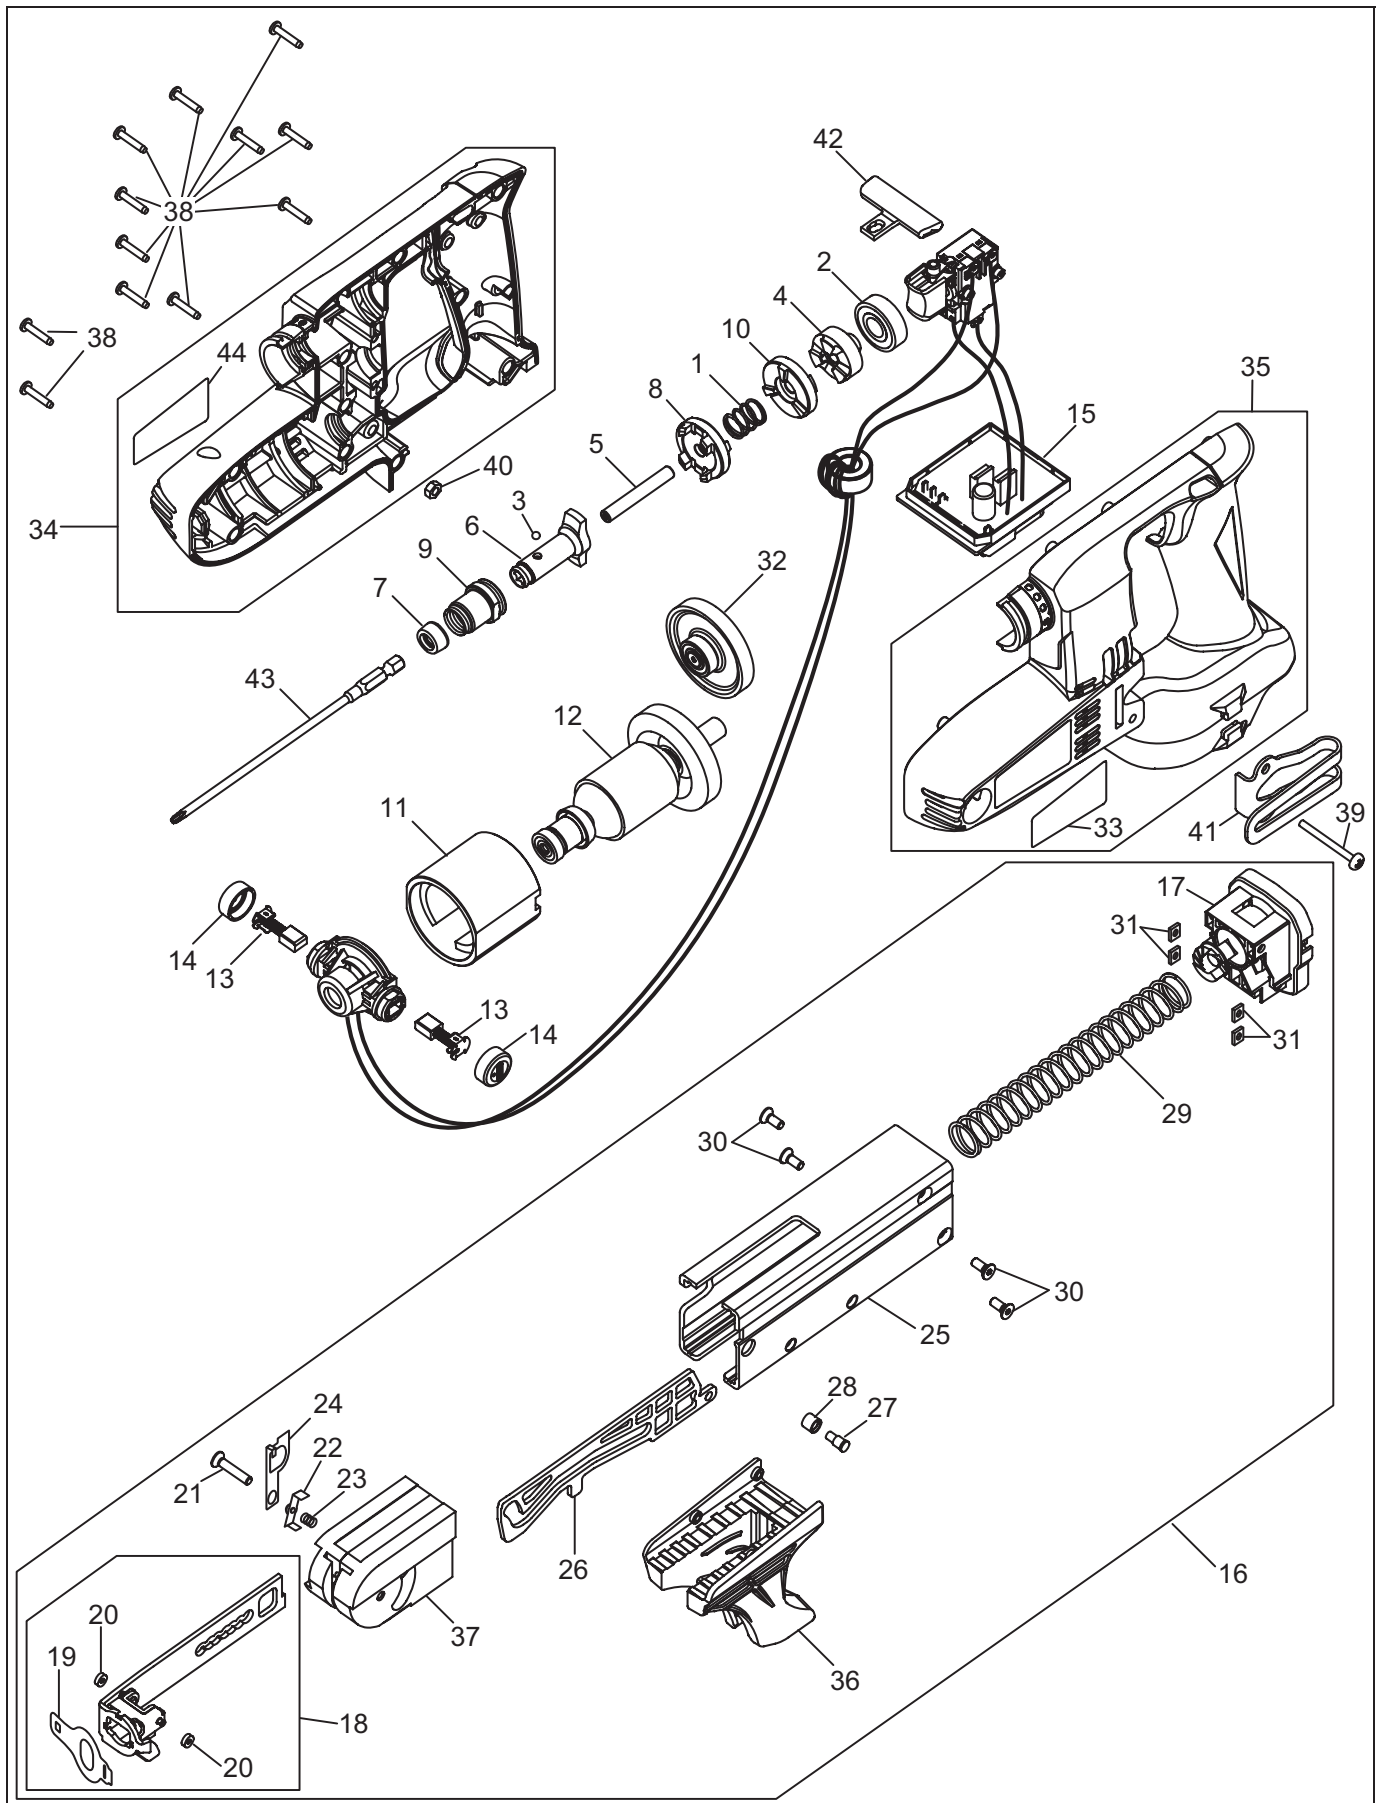

No.	Code	Description
1	KK29084	COMPRESSION SPRING 9084
2	LL11749	BALL BEARINGS 606VV
3	LL71704	STEEL BALL
4	PJ13742	FINAL GEAR
5	PJ13743	GEAR ROD
6	PJ13746	MAIN SHAFT
7	PJ13747	MAIN SHAFT COVER
8	PJ13822	CLUTCH B
9	PJ13820	SHAFT GUIDE
10	PJ13748	CLUTCH A
11	PJ70124	YOKE ASSY
12	PJ70393	ROTOR UNIT
13	PJ80018	CARBON BRUSH SET
14	PJ11718	BRUSH CAP
15	PJ70394	CONTROLLER UNIT
16	PJ70397	ATTACHMENT ASSY
17	PJ70398	ADAPTER ASSY
18	PJ70400	CONTACT ARM ASSY
19	PJ13785	CONTACT TOP
20	TA18927	RUBBER WASHER
21	PJ13787	HEX SOCKET FLAT HEAD BOLT M4X12
22	PJ13790	ADJUST PIN PLATE
23	PJ13791	ADJUST SPRING (ADJUST PIN U)
24	PJ13806	ADJUST STOPPER
25	PJ13745	NOSE HOLDER
26	PJ13756	ROLLER GUIDE PLATE
27	PJ13766	SHOULDER BOLT M4X5
28	PJ13767	ROLLER 7X5.75
29	PJ13768	SCREW (ATTACHMENT)
30	PJ13789	HEX SOCKET FLAT HEAD BOLT M4X10
31	PJ13744	SQUARE NUT M4
32	PJ70482	SECOND GEAR UNIT B
33	PJ13832	NAME LABEL
34	PJ80085	GRIP, R UNIT
35	PJ80086	GRIP, L UNIT
36	PJ80082	MAGAGINE ASSY
37	PJ80083	NOSE PIECE ASSY

38	AA05589	SCREW 3X16
39	AA21179	PAN-HEAD SCREW 4X35
40	CC41002	NUT 1-4
41	PJ11979	BELT HOOK
42	PJ13762	MODE CHANGE SWITCH
44	PJ13831	WARNING LABEL A
	PJ70058	LATCH ASSY

FS90443 B55H2 BIT FOR PJCD551 (3PCS PER BAG)